
RAVEN

RTV-40 Tracker Installation

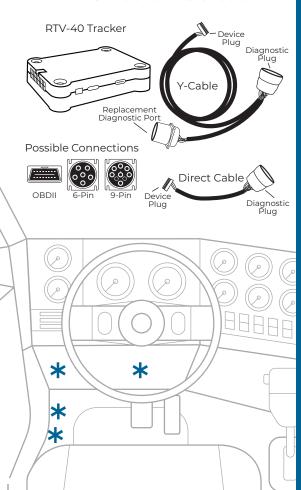

1. Locate The Diagnostics Port

 Usually located under the steering console (see the asterisks (*) on the diagram to the left for potential Diagnostic Port locations)

2. Cable Installation

- · Y-Cable Installation
 - Remove the vehicle's existing Diagnostics Port from its mount
 - Connect the vehicle's Diagnostics Port to Diagnostic Plug of the Y-Cable
 - Mount the Replacement
 Diagnostic Port of the Y-Cable
 to where the original vehicle's
 Diagnostic Port was located to
 allow further diagnostics without
 interruption of service
- · Direct Cable Installation
 - Connect the Diagnostic Plug of the Direct Cable into vehicle's Diagnostic Port

3. Connect Your Device

- Plug in the Device Port from your cable to the Raven Device
 - Carefully align the pins, and push the attachment straight into the device until you hear it lock in place
 - Do not push the attachment in at an angle or use too much force

MORE →

Placement & Cable Management

- Run the cables and device to the desired location in the vehicle
 - · Directly under the dash is preferred
 - Secure the cables and device to ensure safe vehicle and device operation

5. Verify Device Installation

- · Turn the vehicle's engine to "On"
- Wait for the three LEDs to be solid, if they are flashing or not lighting up, the device

is not connected

- · Blue LED Cellular service
- · Green LED Engine data
- · Orange LED GPS service

6. Look — You're On The Map!

• Log-in to tracking.ravenslingshot.com or open your app and start tracking!

Questions & Troubleshooting

 Call +1 (800) 243-5435 to talk to a Technical Support Specialist or visit edge.ravenprecision.com and view the Slingshot on Demand training resources.



RAVEN

- (I) Hours | 7 AM-5 PM CST | Mon-Fri
- Sales & Support | (800) 243-5435
- → Login | tracking.ravenslingshot.com
- Website | ravenprecision.com
- Email | ATDSupport@ravenind.co



